


Pin Tables Copyright Equiptech

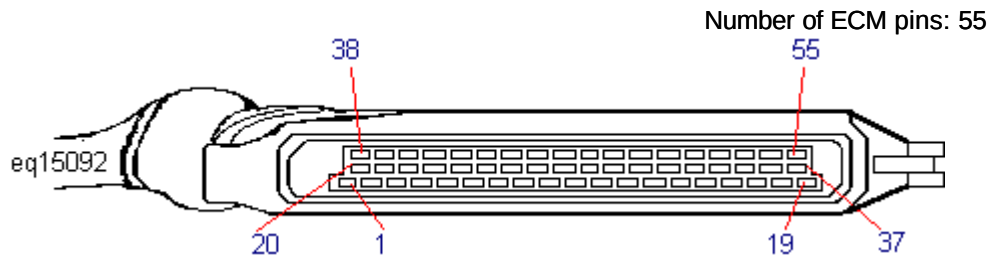

Pin	Connection	Test condition	Volts/Duty Cycle etc
1	coil negative: t1 (cyls 1 & 4)	cranking primary switching dynamic volt drop	nbv 200 min 2.0 max
2	earth	ignition on/running	0.25 max
3	main relay driver: t10	ignition on cranking/running	nbv 1.25 max
4	Trip computer		
5	CFSV : t1	ignition on engine running, active	nbv switching 0 to nbv
6	tachometer (if fitted)		
7	MAP signal : t3	WOT/ignition on Idle speed	4.35 1.5 approx
8	KS signal : t1	engine running, KS active	1.0 approx
9	VSS signal : t4	ignition on vehicle moving	nbv HE signal, when actuated
10	OS signal return : t4	engine running	0.25 max
11	CAS return : t1	cranking/running	0.25 max
12	sensor supply MAP: t1, TPS: t1	ignition on/running	5.0 ± 0.1
13	diagnostic socket : t2	ignition on no major faults major faults	nbv 0.25 max 0.25 max
14	earth	ignition on/running	0.25 max
15	Stepper motor : tD	idle speed	pulse
16	diagnostic socket : tC1		
17	injectors (pulse) : t1	ignition on/running cranking cold running cold cranking warm running warm snap acceleration	nbv 3.0+ ms 3.0 ms 2.4+ ms 2.0 ms 6.0+ ms
18	battery positive: t30	ignition off/on	nbv
19	earth	ignition on/running	0.25 max
20	coil negative: t2 (cyls 2 & 3)	cranking primary switching dynamic volt drop	nbv 200 min 2.0 max
21	Stepper motor : tC	idle speed	pulse
22	SD warning lamp : t1	ignition on/running no major faults major faults	nbv 0.25 max
23	A/C relay driver : t2 (if fitted)		
24	Stepper motor idle switch : tB	idle speed switch open switch closed	5.0v 0.25v max.
25	CTS signal : t2	ignition on/running	20°C 3.0 to 3.5 80°C 1.0 to 1.3
26	sensor return ATS: t1, CTS: t1, MAP: t2, TPS: t2, VSS: t3, KS: t2	ignition on/running	0.25 max
27	ATS signal	ignition on/running	20°C 3.0 to 3.5
28	OS signal : t3	ignition key on engine running	0.4 to 0.5 200 to 1000 mv

Pin Tables Copyright Equiptech

29	TPS signal : t3	throttle fully open	1.0 constant
		ignition on/running	
		closed	0.3
		fully open	5.0 approx
30	CAS signal : t2	cranking:	AC 2.0v+ (peak to peak)
		Idle:	AC 11.0v+ (peak to peak)
		cruise:	AC 14.0v+ (peak to peak)
31	AT selector switch		
32	A/C		
33	Stepper motor switch earth: tA	idle speed	0.25v max
34	A/C		
35	ignition switch supply: t15	ignition on/running	nbv
36	main relay driver	ignition off	nbv
		ignition on/running	1.25 max
37	supply from main relay : t4	ignition on/running	nbv
38	unused		
39	unused		
40	unused		
41	unused		
42	unused		
43	unused		
44	unused		
45	unused		
46	unused		
47	unused		
48	unused		
49	unused		
50	unused		
51	unused		
52	unused		
53	unused		
54	unused		
55	unused		

< END >